

# Setting up the Karaoke Machine:

1. Sit 3 units on top of each other: speaker on bottom then amp. then TV on top.
2. Video cord (yellow) from DVD player output to TV input
3. RCA audio cord from DVD player output to amp. input.
4. Speaker cables from amp. to speaker.

# Turning the Karaoke Machine On:

1. Push the power button on the DVD player to turn it on.
2. Flick the power switch on the amplifier to turn it on.
3. Reach into the back of the TV box and push the button on the top left of the television once to turn it on.
4. Adjust the volume knobs on the amp to the desired levels and enjoy!