 




POPCORN MAKER

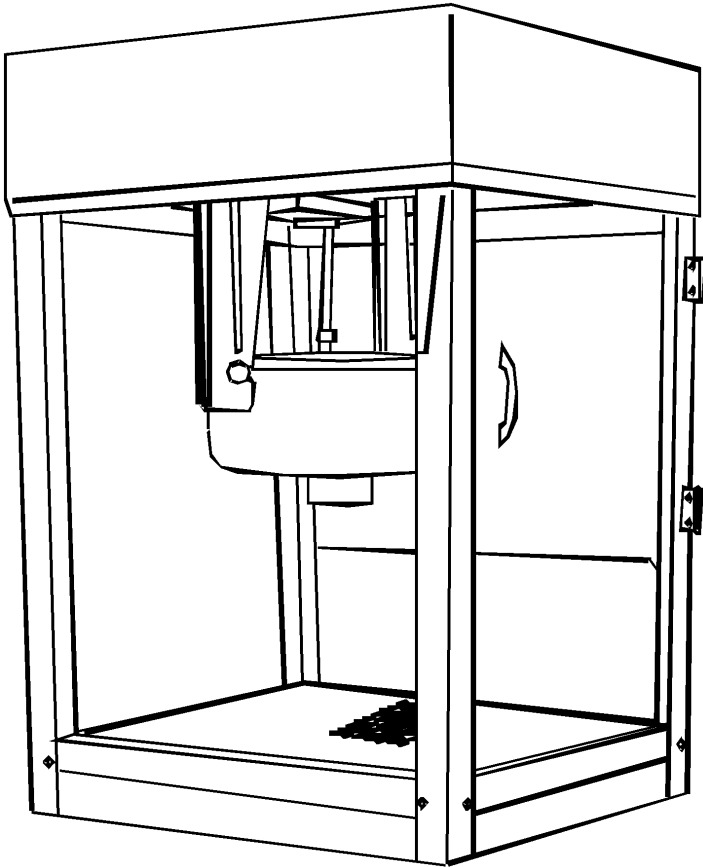

INSTRUCTION MANUAL
8oz Commercial Popcorn Machine

8oz COMMERCIAL POPCORN MACHINE

MODEL NO. & SPECIFICATIONS:

Model No.: UE40010

 
 
Voltage: AC 230V~50Hz

Input Power: 860W

Please read this user manual carefully before assembling and use.


IMPORTANT SAFEGUARDS

1. **READ ALL INSTRUCTIONS BEFORE USING YOUR POPCORN MACHINE.**
2. Do not touch hot surfaces. Always use handles or knobs to operate.
3. To avoid any risk of electrical shock, do not immerse cord or plug into water or other liquid.
4. Close supervision is necessary when the machine is being used by or near children.
5. Unplug main power cord from outlet while not in use and before cleaning.
6. Allow **HOT** parts to cool down before maneuvering.
7. Do not operate the appliance with damaged cord or plug, malfunction or with any mechanical damage. Send the unit to your nearest authorised service centre for examination and repair (**ONLY** technicians should open up the unit).
8. Injury may be caused by using any accessories or attachments that are not provided or recommended by the manufacturer.
9. Do not use outdoors.
10. Do not pop the kernel with a dry pot (without oil).
11. Do not immerse popping pot set into water.
12. Pot surface is **HOT** and should **NOT** be touched during popping or just after use.
13. Unplug, clean and cover the unit and store into dry and safe place if not being use for long time.
14. Do not leave power cord hanging over edge of table or counter or allow it to touch any hot surfaces.
15. Do not place the unit on or near a hot gas or electric burner or in a heated oven.
16. Extreme care must be taken if moving the appliance when it contains hot oil or other hot liquids.
17. Turn **ALL** switches to 'OFF' position before disconnecting power plug from the wall supply outlet.
18. Do not use appliance for anything other than indicated usage.
19. To avoid overheating, always add oil before kernels prior to operating.
20. Extreme care must be taken when unloading popcorn.
21. Always place the unit over a counter-top so that residual hot oil or water running out will not cause burns.

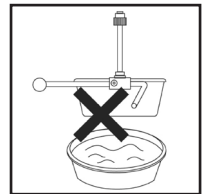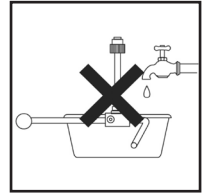

SAVE THESE INSTRUCTIONS

ASSEMBLY

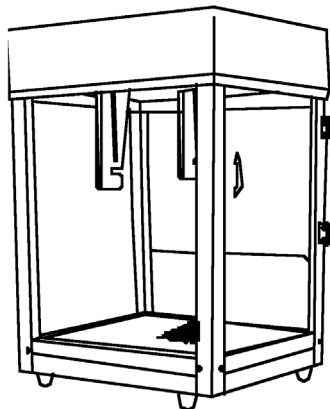

A



B



C




D

A. Main unit x 1 pc

B. Popping pot x 1 pc

C. Popcorn scoop x 1 pc

D. Kernel scoop + Oil scoop set

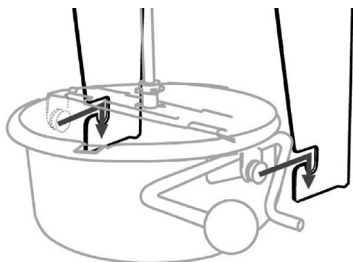





Assemble the kettle (B) on the supporters which are built into the main unit (A), and connect the socket.





POPPING INSTRUCTIONS

User should follow the procedures:

- 1) Before using the unit, please check carefully if voltage is suitable to the country. (Please check that the voltage matches the rating label specified next to the power cord).
- 2) Clean the internal surface of the popping pot and main unit surfaces.
- 3) Main unit has 3 function switches as follows:

Spot light and warmer	 	(I)
Stirrer		(II)
Stainless steel Pot heater		(III)

  - 4) Hook up the pot onto the hanger of the main unit.
- 5) Switch on the light and heater (I & III), and then add a suitable amount of butter or oil (Fig. 1). Consumer should use an amount of oil (Max. 15g) subject to your own taste.
- 6) Popping pot should be pre-heated for 3 to 4 minutes with oil (until steam comes out from the pot). Please prepare kernels with sugar. (Measure amount of kernels with measuring scoop provided and amount of sugar subject to your own choice, liquid sugar and honey **must not** be used.)
- 7) Open the lid and pour in the pre-mixed kernel and sugars. (Fig. 2) (**Caution:** Lid might be hot - handling with an oven mitten is recommended).
- 8) Switch ON the Stirrer (II) so that it starts stirring. (Fig. 3)
- 9) Popcorn starts popping out through the lid after about 2 to 3 minutes. (Fig. 4)
- 10) Switch OFF the stirrer & heater (II & III) when popping is complete (no more popping sound from pot). Rotate the roller bar of the pot to pour out all remaining popcorn from pot.
- 11) Keep heater switch (III) OFF if the unit is not continuously being used. Only keep the spot light and warmer ON; this will keep the popcorn warm, dry and tasty.
- 12) Serve your popcorn with popcorn scoop provided.
- 13) Remove plug from power supply if the unit is not being used for long time.
- 14) Repeat step 7 to 10 for further popping.

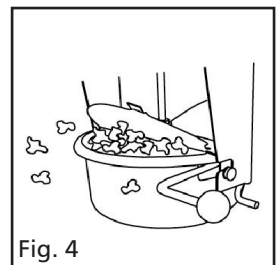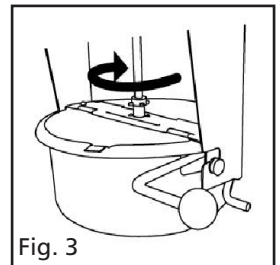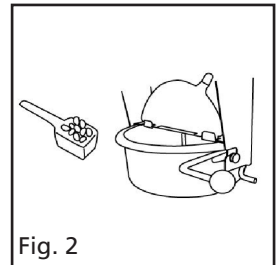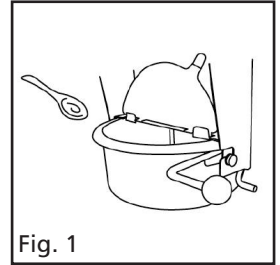

CLEANING AND MAINTENANCE

To avoid an excess amount of burnt sugar sticking on the bottom of the inner pot, it is strongly recommended to clean the popping pot after using 3 to 4 times.

After using the popcorn machine, users should use a wet towel to clean up the main unit, main body and glasses; it is strongly recommended to tidy up the rubbish tray frequently to avoid a build up of bacteria.

QUICK CLEANING PROCEDURE

Switch OFF (II & III). Pour 200 to 400 ml of water (NO detergent is necessary) into inner pot. Switch ON the stirrer (II) & heater (III) again to boil the water and let the stirrer to turn in order to remove excess sugar stuck on the surface. Pour out the water after about 1 to 2 minutes of boiling. Repeat the same procedure 2 to 3 times to get better result.

STANDARD CLEANING PROCEDURE

1. Repeat the above 'Quick cleaning procedure' until it's relatively clean.
2. Switch off the machine and wait for the popping pot to cool down. Clean the inside and outside of the pot by brush and wet towel (**NEVER** immerse the pot into water).



Register your popcorn maker with us

To let us know about your purchase so we can mark the start of your 12-month warranty, please complete this form in capital letters and send it to us at: JM Posner LTD, 26B Park Road, Bushey, WD23 3EQ.

Mr <input type="checkbox"/>	Mrs <input type="checkbox"/>	Miss <input type="checkbox"/>	Ms <input type="checkbox"/>		
Surname <input type="text"/>		First Name <input type="text"/>			
Address <input type="text"/>					
Address <input type="text"/>					
Postcode <input type="text"/>					
Phone <input type="text"/>		Mobile <input type="text"/>			

Your popcorn maker

When did you purchase your popcorn maker?				<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
				Day	Month	Year				
Did you buy it yourself?		Yes <input type="checkbox"/>	No <input type="checkbox"/>	Was it a present?		Yes <input type="checkbox"/>	No <input type="checkbox"/>			
Did you acquire it another way?		Yes <input type="checkbox"/>	No <input type="checkbox"/>							
Where did you first hear about our popcorn makers?										
Newspaper <input type="checkbox"/>	Website <input type="checkbox"/>	Demonstration <input type="checkbox"/>	Catalogue <input type="checkbox"/>	Friends/Word of mouth <input type="checkbox"/>						

